


## QUICKSTART



Place the system on a solid surface and open the monitor.

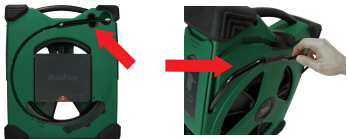


Take out the camera.

Pull out the stand.

## OPERATION


 **LED lights:**  
See LED INDICATIONS



 Turn on and off

 LED lights

 LED lights


 512 Hz transmitter

 Reset meter counter

 +  Reset inclination angle

## OPERATION

 **First press**  
LED turns red, recording is started


 **Second press**  
LED starts flashing, recording is paused

 Take picture

 Stop

 Menu

## CONNECT

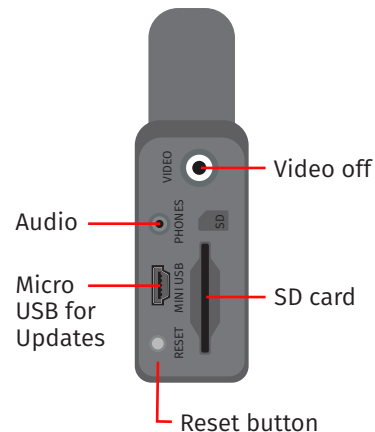

## STORE



First attach the cable in metal clip (1) and then click on the camera (2).



Pull out the stand (1) and fold it upwards (2).

## LED INDICATIONS



**Green light**  
System on

### Charging?

Remove the poweradapter from the flap on the right-hand side and connect to the MiniFlex.



**Orange flashing light**  
Miniflex is being charged

**Orange light**  
Miniflex is fully charged

## GENERAL

- Always read the MiniFlex manual before using the system.
- Full manual can be downloaded at [www.camtronics.nl](http://www.camtronics.nl).
- No rights can be derived from it.

## MAINTENANCE



- Clean reel using slightly damp cloth. Never spray water on the system!
- Use and store in a ventilated room.  
Temperature: min 0°C and max 45°C.

## TROUBLESHOOTING

### Stripes on the image?

Check that the transmitter is switched on and switch it off.

### Reset?

Open the rubber flap on the right-hand side and press the reset button with a paperclip or pen.

See *CONNECT*

## TIP

In order to bend it, it is necessary to grease this part before use. Use acid-free petroleum jelly for this purpose.

**GREASE**

